

SECTION 11 SPARE PARTS LISTING

ITEM #	DESCRIPTION	PART NUMBER	ITEM #	DESCRIPTION	PART NUMBER
1	FLOW METER 1-10 GPM	41530612	14b	PUMP, 208V, 3 PH, MRO2X THRU MRO4X	R080-0007
2	VALVED METER 1-10 GPM	41-0024	14c	PUMP, 230V, 3 PH, MRO2X THRU MRO4X	R080-0009
3	SIDE ENTRY HOOD	0167-0014	14d	PUMP, 460V, 3 PH, MRO2X THRU MRO4X	R080-0010
4	BALL VALVE	041003	14e	PUMP, 208V, 3 PH, MRO5X	0180-3208
5	PRESSURE GAUGE 0-100 PSI	43-0012	14f	PUMP, 230V, 3 PH, MRO5X	0180-3230
6	1/2" HB x MPT ELBOW	14520406	15a	MOTOR STARTER 3 PH	60760445
7	3/4" HB x 1/2" MPT ELBOW	14520408	15b	MOTOR STARTER 460v, 3 PH	61-0005
8	3/4" HB x MPT ELBOW	14520410	16	CONDUCTIVITY SENSOR	69446017
9	PAA QUICK DISCONNECT	16-0042	17	0.5" FPT, NC SOLENOID	R59-0002
10	PAA BOTTLE ASSY	0185-0039	18	0.5" FPT, NO SOLENOID	R59-0006
11	0-300 PSI GAUGE	43530714	19	0.75" FPT, NC SOLENOID	R59-0015
12	CONTROLLER ASSEMBLY	R69446010	20	0.75" EJECTOR	40531603
13	MEMBRANE	R22-4040	21	PRESSURE SWITCH	65-0014
14a	PUMP, 220V, 1 PH, MRO2X THRU MRO4X	R080-0008	22	PUMP, 208V, 3 PH, 3HP, MRO5X	R080-0012

